

SWP-11

Scan Window Protector for Opticon PR-11

This custom made Screen Protector is designed for the Opticon PR-11 and is made from the best grade protection foil available on the market.

The Ultra Clear foil enables scanning of every detail without any loss of resolution while also offering perfect protection of the scan window.

Long lasting performance due to an extremely scratch-resistant and durable surface.

Here's an overview of it's advantages:

- ✓ Ultra Clear
- ✓ Anti-Scratch
- ✓ Easy to apply
- ✓ Easy residue-free removable



APPLICATION INSTRUCTIONS

How to apply the Scan Window Protector (SWP):

Place the PR-11 on a solid surface which is free of dust. Then wash your hands thoroughly.

On one side you will find a small area which is the starting point to peel (indicated by the grey area in the image). The thinner part is the film that protects the actual SWP.


Peel the film off halfway and begin to apply the SWP aligning it from one side of the screen. Make sure the SWP is centered to the middle of the scanners' window.

Caution: Do not touch the adhesive side of the SWP with your fingers!

Verify that the entire SWP now will fall in the right place. If no further correction is necessary then slowly peel off the remainder of the film and apply the rest of the SWP to the scan window.

Cover a creditcard with a soft cloth and carefully slide over the SWP from one side to the other to smooth out any remaining air bubbles.

If the SWP is not positioned centrally after having been applied, use some normal sticky tape to remove it from the scan window and start again.

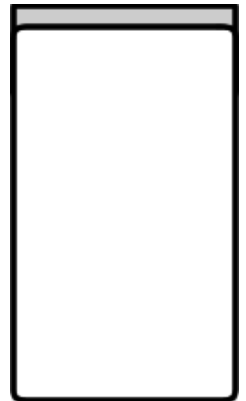

REMOVAL INSTRUCTIONS

Use some normal sticky tape and apply this on top of the SWP. Lift and remove the SWP from the scan window.

Clean the window with a microfibre cloth if any dust or dirt marks are visible on the scan window. A new SWP can be applied now.